



Shock/Vibration Control Switches

Models: VS2, VS2C, VS2EX, VS2EXR, VS2EXRB and VS94

Installation Instructions

Warranty - A limited warranty on materials and workmanship is given with this Murphy product.
A copy of the warranty may be viewed or printed by going to <http://www.fwmurphy.com/warranty>.



Please read the following information before installing.

BEFORE BEGINNING INSTALLATION OF THIS MURPHY PRODUCT:

- A visual inspection of this product for damage during shipping is recommended before installation.
- It is your responsibility to ensure that qualified mechanical and electrical technicians install this product.
- Disconnect all electrical power to the machine.
- Make sure machine cannot operate during installation.
- Follow all safety warnings of the machine manufacturer.
- Read and follow all installation instructions.
- Please contact Enovation Controls immediately if you have any questions.

Table of Contents

General Information	1
Description	1
Models	1
Remote Reset Feature (VS2EXR, VS2EXRB and VS94 only).....	1
Time Delay Option (VS94 only).....	1
Space Heater Options (VS94 only)	2
Dimensions	3
Installation	4
C-Clamp Installation (VS2C model only).....	4
All Models.....	5
Sensitivity Adjustment	6
VS94 Time Delay Adjustment	8
Typical Mounting Locations	9
Internal Switches	10
Electrical	11
Specifications	12
VS2 and VS2C.....	12
VS2EX	12
VS2EXR.....	12
VS2EXRB	12
VS94	13
For UL Applications.....	13
Service Parts	14

THIS PAGE INTENTIONALLY LEFT BLANK

General Information

Description

The Murphy shock and vibration switches are available in a variety of models. They are used for applications on machinery or equipment where excessive vibration or shock can damage the equipment or otherwise pose a threat to proper operation. A set of contacts is held in a latched position through a mechanical latch and magnet mechanism. As the level of vibration or shock increases, inertia mass exerts force against the latch arm and forces it away from the magnetic latch. This action causes the latch arm to operate the contacts. Sensitivity is obtained by adjusting the size of the air gap between the magnet and the latch arm plate. Applications include all types of rotating or reciprocating machinery such as a cooling fan, engine, pump, compressors, pump jacks, etc.

Models

- **VS2:** Base mount; non-hazardous locations
- **VS2C:** C-clamp mount; non-hazardous locations
- **VS2EX:** Explosion-proof; Class I, Div. 1, Groups C and D (CSA and UL approved).
- **VS2EXR:** Explosion-proof with remote reset (CSA and UL approved).
- **VS2EXRB:** Explosion-proof; Class I, Div.1, Group B: with remote reset (no third-party approval for this product).
- **VS94:** Base mount; non-hazardous locations, NEMA 4X/IP66.

Remote Reset Feature (VS2EXR, VS2EXRB and VS94 only)

Include built-in electric solenoid which allows reset of tripped unit from a remote location. Standard on models VS2EXR and VS2ERB. Optional on VS94 (options listed below).

- R15: Remote reset for 115 VAC
- R24: Remote reset for 24 VDC

Time Delay Option (VS94 only)

Overrides trip operation on start up. For VS94 series models, the delay time is field-adjustable from 5 seconds up to 100 seconds with a 20-turn potentiometer (5 seconds per turn approximately). Options listed below:



- T15: Time delay for 115 VAC
- T24: Time delay for 24 VDC

Space Heater Options (VS94 only)


This optional space heater board prevents moisture from condensing inside the VS94 Series case. Options listed below:

- H15: Space heater for 115 VAC
- H24: Space heater for 24 VDC


Dimensions

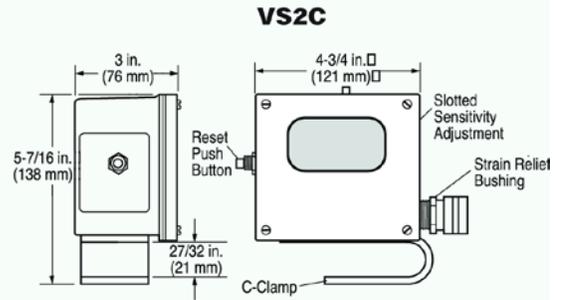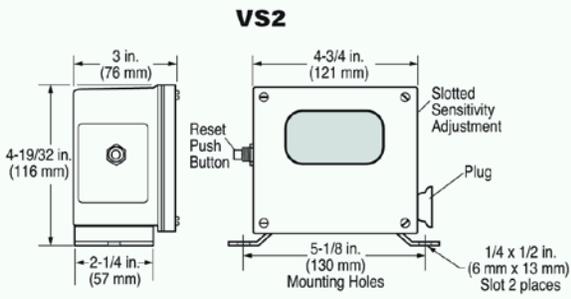


VS2EX and VS2EXR

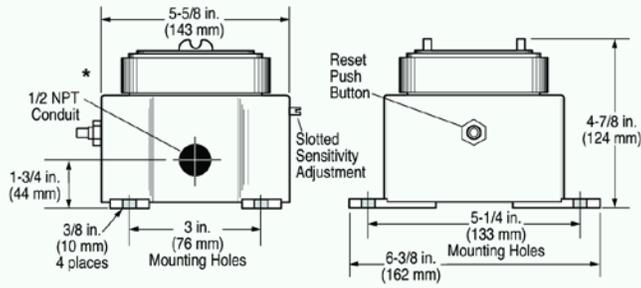

VS2EXRB

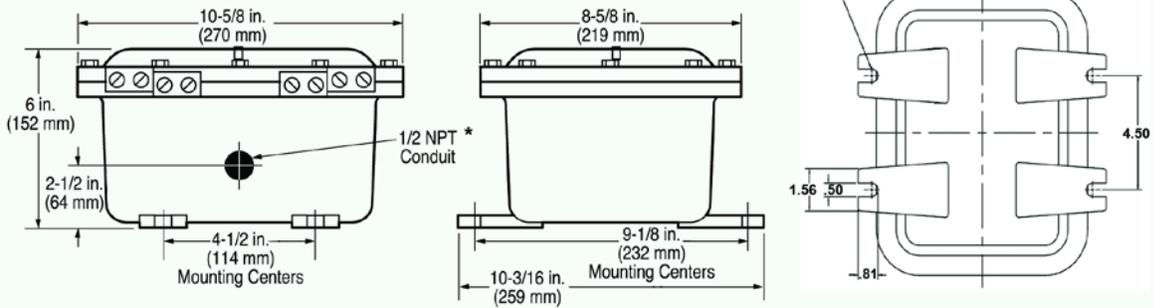

VS94

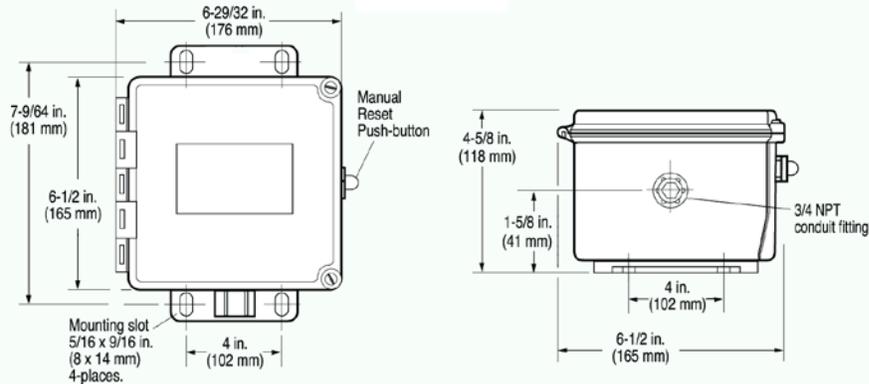

* NEVER mount with conduit hole pointing up.

Installation

The VS2 and VS94 series shock switches are sensitive to shock and vibration in all three planes of motion – up/down, front/back and side/side. Front/back is the most sensitive (the reset push button is located on the front of the unit). For maximum sensitivity, mount the unit so that the front faces into the direction of machine rotation. (See **Dimensions** for sensitivity adjustment location).


The VS2 and VS94 Series must be firmly attached/mounted to the machine so that all mounting surfaces are in rigid contact with the mounting service of the machine. For best results, mount the instrument in-line with the direction of rotating shafts and/or near bearings. In other words, the Reset push button should be mounted pointing out, perpendicular to the axis of rotation (see **Typical Mounting Locations**). It might be necessary to provide a mounting plate or bracket to attach the VS2 or VS94 Series to the machine. The mounting bracket should be thick enough to prevent induced acceleration/vibration upon the VS2 or VS94 Series. Typically ½ in. (13mm) thick plate is sufficient. See illustrations in **Typical Mounting Locations**.

CAUTION: A dust boot is provided on the Reset push button for all series to prevent moisture or dust intrusion. The sensitivity adjustment for model VS2EX is not sealed; therefore, mounting orientation should be on a horizontal plane or with the sensitivity adjustment pointing down. Sensitivity adjustment for model VS2 is covered by a plug. The plug must be in place and tight to prevent moisture or dust intrusion.

C-Clamp Installation (VS2C model only)

A C-Clamp is supplied with the VS2C model only. The C-Clamp is shipped installed on the VS2C but may optionally be installed on the VS2EX and VS2EXR switches.

1. The C-Clamp (**B**) will already be installed on a ¼ in. (6mm) thick steel mounting plate. (**A**). Bolt the VS2EX and/or VS2EXR switch to the mounting plate as illustrated – with four 5/16 in bolts, nuts and washers.
2. The mounting location should provide convenient access to the TATTLETALE® pushbutton (**C**).

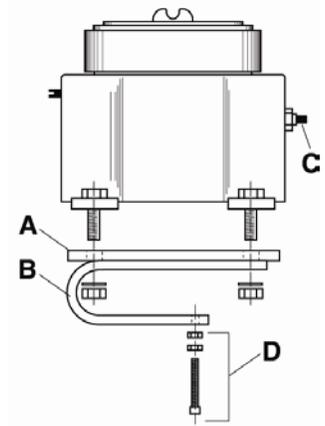

3. The hardened set screw and nuts (**D**) are used to tighten the switch to an I-Beam or cross member such as a Sampson post of an oil well pump jack.

CAUTION: Conduit fittings, especially for explosion-proof enclosures, are not weatherproof. Make sure to mount the products horizontally to minimize water ingress. The conduit opening should NEVER be pointing up. A dust plug is installed in these products in the conduit hole. It is not meant to prevent water intrusion.

All Models

WARNING: STOP THE MACHINE AND DISCONNECT ALL ELECTRICAL POWER BEFORE BEGINNING INSTALLATION.

1. Firmly secure the unit to the equipment using the base foot mount or C-Clamp, if applicable. See **C-Clamp Installation**.

For oil well pump jacks, attach the VS2 and VS94 Series to the Sampson post or walking beam. See **Typical Mounting Locations**.

2. Make the necessary electrical connections to the vibration switch. See **Internal Switches** for electrical terminal locations and for typical wiring diagrams. DO NOT EXCEED VOLTAGE OR CURRENT RATINGS OF THE CONTACTS. Follow appropriate electrical codes/methods when making electrical connections. Be sure that the run of electrical cable is secured to the machine and is well insulated from electrical shorting. Use of conduit is recommended.

NOTE: If the electrical cable crosses a pivot point such as at the pivot of the walking beam, be sure to allow enough slack in the cable so that no stress is placed on the cable when the beam moves.

If the conduit is not used for the entire length of wiring, conduit should be used from the electrical supply box to a height above ground level that prevents damage to the exposed cable from the elements, rodents, etc. or otherwise required by applicable electrical codes. If conduit is not directly attached to the VS2 and VS94 Series switch, use a strain relief bushing and weatherproof cap on the exposed end of the conduit. A drip loop should be provided in the cable to prevent moisture from draining down the cable into the conduit should the weatherproof cap fail.

NOTE: Hazardous area enclosures installed in hazardous areas require explosion-proof, poured conduit seals. Installation should only be done by qualified personnel trained in hazardous area electrical practices.

Sensitivity Adjustment

WARNING: REMOVE ALL POWER BEFORE OPENING THE ENCLOSURE. IT IS YOUR RESPONSIBILITY TO HAVE A QUALIFIED PERSON PERFORM ADJUSTMENTS AND MAKE SURE IT CONFORMS TO NEC AND LOCAL CODES. DO NOT ADJUST SENSITIVITY WHILE THE MACHINE IS RUNNING. STAND CLEAR OF THE MACHINE AT ALL TIMES WHEN IT IS OPERATING.

All models of the VS2 and VS94 Series cover a wide range of sensitivity. Each model is adjusted to the specific piece of machinery on which it is installed in a satisfactory location.


NOTE: The sensitivity of this device is affected by extreme temperatures. Some adjustment may be necessary in extreme environments.

The sensitivity adjustment will be increased or decreased so that the switch does not trip during start up or under normal operating conditions. Some machinery experiences a shock on start up. Remote reset versions are available to hold the switch in reset during equipment start up. This allows a more sensitive setting of the switch; however, it is not always practical. Instructions are given for adjusting sensitivity to not trip on start up. This is typically done as follows:

1. Replace all covers, lids and electrical enclosures.
2. Press the reset push button to engage the magnetic latch. To be sure the magnetic latch has engaged, observe latch through the window on the VS2 and VS2C (see **DETAIL A**).

On the VS2EX, VS94 Series the reset button remains depressed meaning the magnetic latch has engaged.

3. Start the machine.

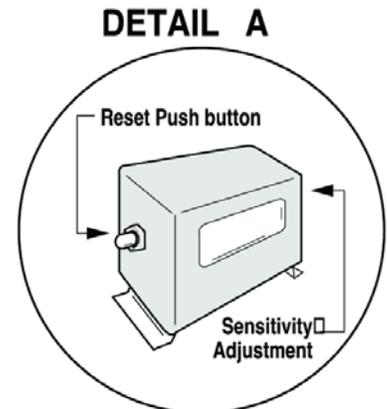

4. If the instrument trips on start up, allow the machine to

stop. Turn the sensitivity adjustment $\frac{1}{4}$ turn clockwise, (adjustment for VS94 and VS2EXRB models is located within the box, see **DETAIL B**).


WARNING: MAKE THE AREA NON-HAZARDOUS OR DE-ENERGIZE ALL CIRCUITS BEFORE OPENING THE EXPLOSION-PROOF (-EX) ENCLOSURES.

WARNING: ROTATING SENSITIVITY ADJUSTMENT SCREW COUNTER CLOCKWISE / LESS SENSITIVE AFTER F LATCH HAS TRIPPED COULD DAMAGE THE ADJUSTMENT SHAFT.

Depress the Reset button, and restart the machine. Repeat this process until the unit does not trip on start up.

5. If the instrument does NOT trip on start up, stop the machine. Turn the sensitivity adjustment $\frac{1}{4}$ turn counter-clockwise. Repeat the start-up/stop process until the instrument trips on start-up. Turn the sensitivity adjustment $\frac{1}{4}$ turn clockwise (less sensitive). Restart the machine to verify the instrument will not trip on start up.
6. Verify that the unit will trip when abnormal shock/vibration exists.

DETAIL B

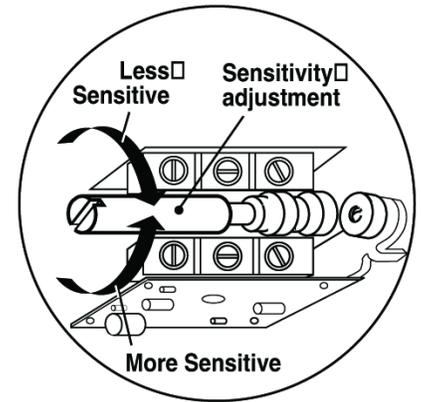

VS94 Time Delay Adjustment


1. Apply power to the time delay circuit. (See **Electrical** for the time delay circuit). The time delay function is initiated.
2. Time the length of the delay with a watch. Let time delay expire. After it expires, the override circuit will de-energize the solenoid, allowing the latch to trip. A clicking noise is heard.

WARNING: REMOVE ALL POWER BEFORE OPENING ACCESS DOOR. IT IS YOUR RESPONSIBILITY TO HAVE A QUALIFIED PERSON ADJUST THE UNIT AND MAKE SURE IT CONFORMS TO NEC AND LOCAL CODES.

3. TURN THE POWER OFF TO RESET THE TIME DELAY CIRCUIT.

NOTE: Allow 30 seconds bleed-time between turning the power OFF and ON.

4. Locate the time adjustment pot (**DETAIL C**). The time is factory-set at the lowest setting (approx. 5 seconds). To increase time, rotate the 20-turn pot clockwise as needed (approx. 5 seconds per turn).
5. Repeat the above steps as necessary to obtain desired time delay.

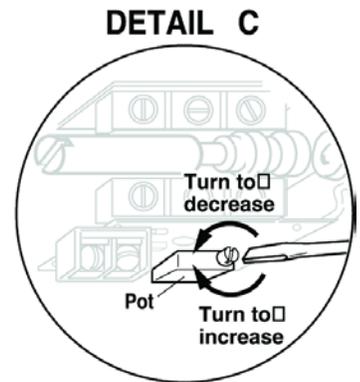


NOTE: An external time delay can be used with the remote reset feature of the VS2EXR series to provide a remote reset and override of the trip operation on start-up. Time delay must automatically disconnect after equipment start-up.

NOTE: The remote reset solenoids are for momentary use. They are not rated for continuous operation. Continuous operation will damage the solenoids and void the warranty.

Typical Mounting Locations


NOTE: These are typical mounting locations for best operation. Other mountings are possible. See Installation section for more information.

2-Throw Balance-Opposed Compressor

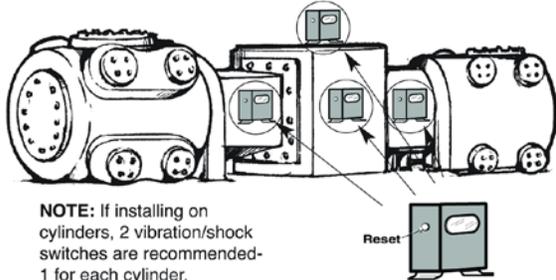


NOTE: If installing on cylinders, 2 vibration/shock switches are recommended- 1 for each cylinder.


Pumping Unit

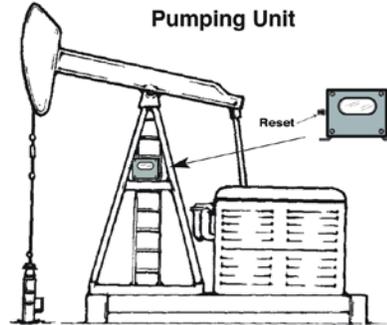


Engine and Vertical Shaft Pump

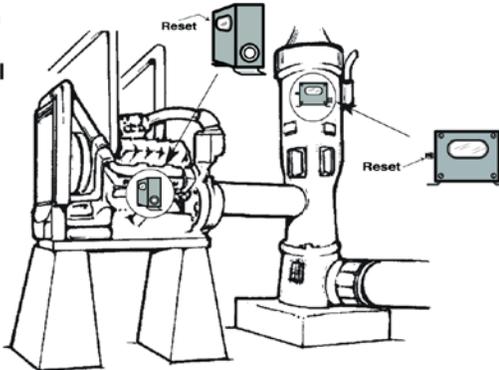


Y Type Reciprocating Compressor

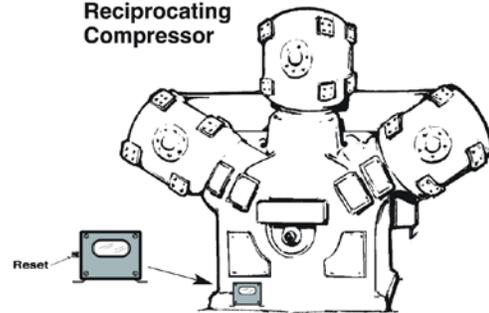


Generator Sets

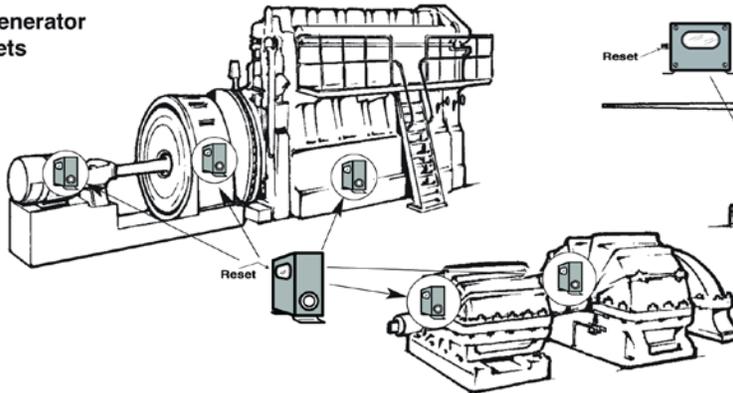


Cooling Tower Fan or Heat Exchanger

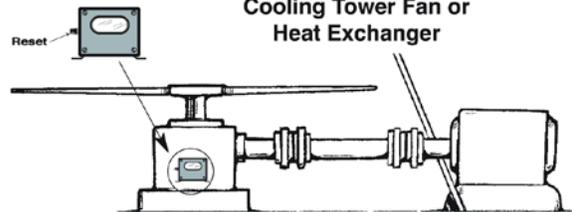

Engine Compressor

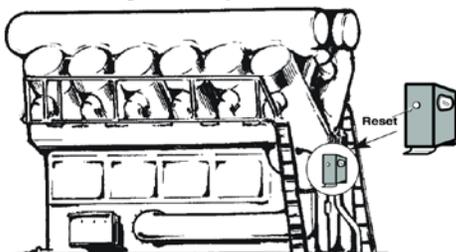


Turbine Centrifugal Compressor

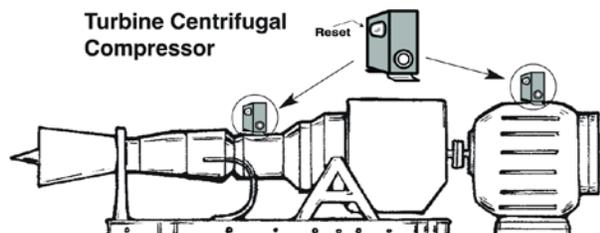


Internal Switches

VS2 and VS2C

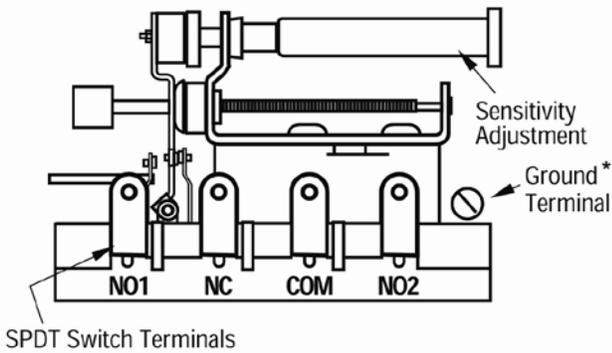


*The internal ground connection is only available on the VS2 by threading the nut supplied in the hardware kit onto the base mounting bolt.


VS2EXR

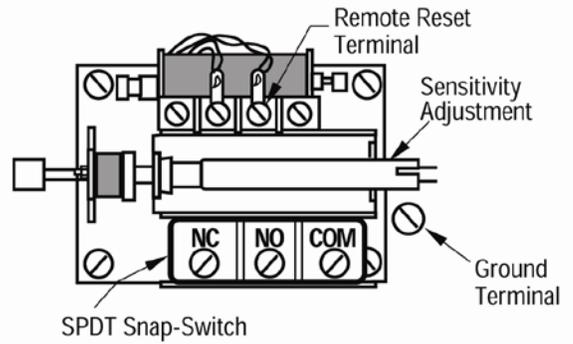


VS2EX

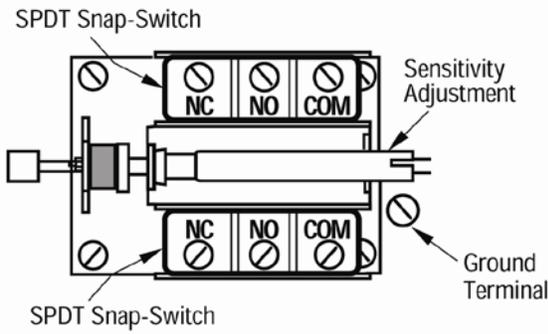

VS2EXB and VS2EXRB

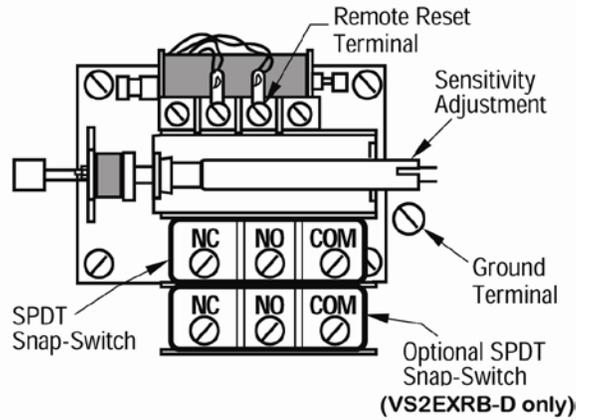

VS94

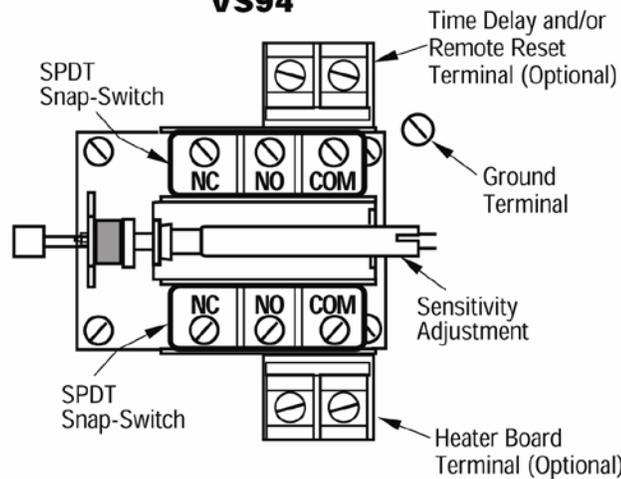


Electrical




WARNING: REMOVE POWER BEFORE OPENING THE UNIT (ACCESS DOOR). STOP THE MACHINE AND DISCONNECT ALL ELECTRICAL POWER BEFORE BEGINNING THE WIRING OPERATION. IT IS YOUR RESPONSIBILITY TO HAVE A QUALIFIED PERSON INSTALL AND WIRE THE UNIT AND MAKE SURE IT CONFORMS WITH NEC AND APPLICABLE CODES.


VS2 and VS2C
Typical Wiring Diagram for Single or Dual CD Ignition

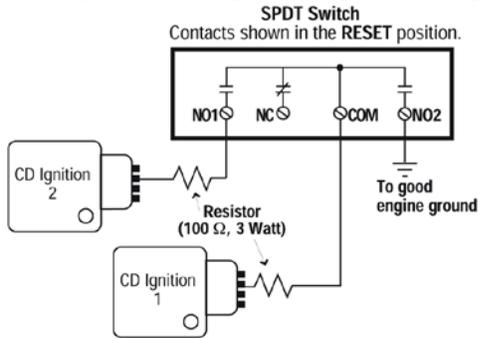


VS2EX
Typical Wiring Diagram for Single or Dual CD Ignitions

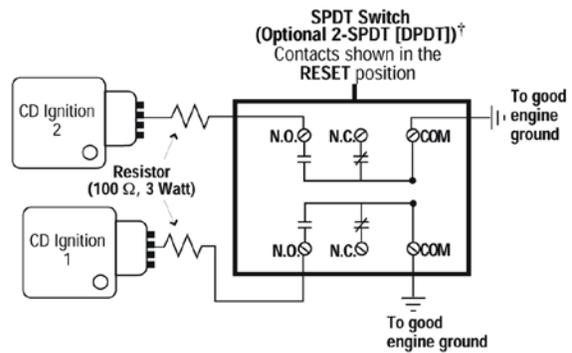


VS2EXR and VS2EXRB
Typical Wiring Diagram for Single or Dual CD Ignitions

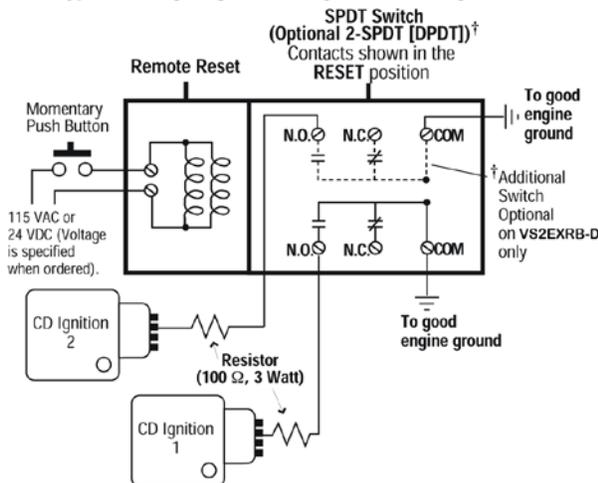


VS94
Typical Wiring Diagram for Single or Dual CD Ignitions

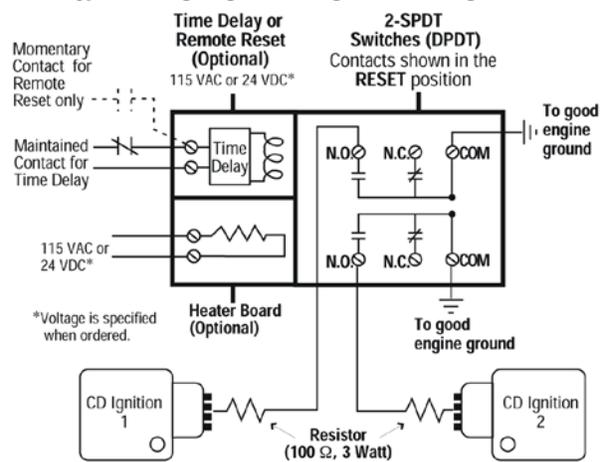

VS2, VS2C, VS2EX, VS2EXR, VS2EXRB and VS94
Typical Wiring Diagram for Electric Motors

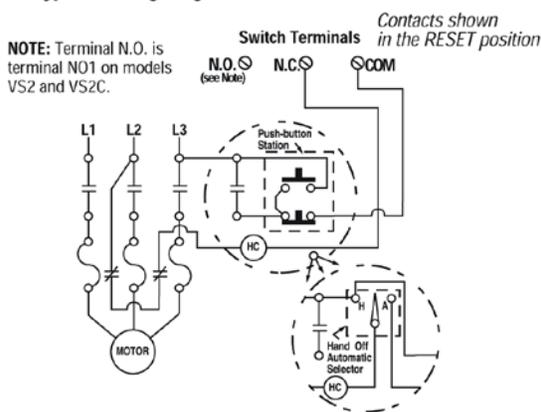

VS2, VS2C, VS2EX, VS2EXR, VS2EXRB and VS94
Typical Wiring Diagram for Distributor Ignition or Diesel

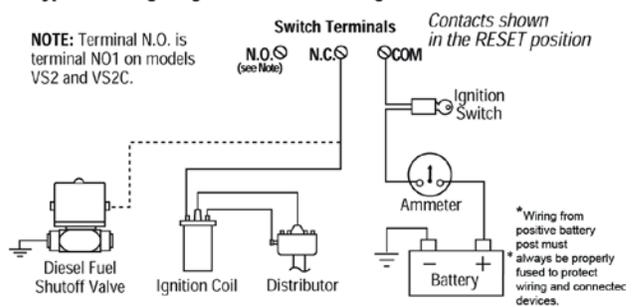

Specifications

VS2 and VS2C

- **Case:** Environmental Protection: Ingress protected to IP54 (when mounted on a horizontal surface with drain holes down).
- VS2: Base Mount
- VS2C: C-Clamp mount. Includes 45' (13.7M), 2-conductor 16 AWG, 30 strands/0.25mm strand diameter (1.5mm²) cable and five cable hold-down clamps.
- **Contacts:** SPDT double make leaf contacts, 3A @ 240 VAC, 10A @ 120 VAC; 10A @ 32 VDC
- **Operating Temperature Range:** -40°F to 185°F (-40°C to 85°C)
- **Range adjustment:** 0-7 G's; 0-100 Hz/0.10 in. displacement.

VS2EX

- **Case:** Explosion-proof aluminum alloy housing; meets IP54 specifications; Class I, Division 1, Groups C&D; UL and CSA listed.*
- VS2EX: Base mount
- **Snap switches:** 2-SPDT snap-switches; 5A @ 480 VAC*; 2A resistive, 1A inductive, up to 30 VDC.
- **Operating Temperature Range:** -40°F to 185°F (-40°C to 85°C)
- **Range adjustment:** 0-7 G's; 0-100 Hz/0.10 in. displacement.

VS2EXR

- **Case:** Same as VS2EX
- **Snap switch:** 1-SPDT snap switch and reset coil; 5A @ 480 VAC*; 2A resistive, 1A inductive, up to 30 VDC.
- **Remote reset:**

Option	Operating Current
-R15:	350 MA @ 115 VAC (momentary duty, not continuous)
-R24:	350 mA @ 24 VDC (momentary duty, not continuous)
- **Operating Temperature Range:** -40°F to 185°F (-40°C to 85°C)
- **Range adjustment:** 0-7 G's; 0-100 Hz/0.10 in. displacement.

VS2EXRB

- **Case:** Explosion-proof aluminum alloy housing; constructed to meet Class I, Division 1, Group B hazardous areas. No third party certifications.
- **Snap switch:** 1-SPDT snap switch with reset coil (option available for additional SPDT switch); 5A @ 480 VAC; 2A resistive, 1 A inductive, up to 30 VDC. (-D option adds another SPDT with the same rating)
- **Remote Reset:**

Option	Operating Current
-R15:	350 MA @ 115 VAC (momentary duty, not continuous)
-R24:	350 mA @ 24 VDC (momentary duty, not continuous)

- **Operating Temperature Range:** -40°F to 185°F (-40°C to 85°C)
- **Range adjustment:** 0-7 G's; 0-100 Hz/0.10 in. displacement

VS94

- **Case:** Polyester fiberglass reinforced; NEMA type 4 and 4X; IP66; CSA types 4 and 12.
- **Conduit Fitting:** ¾ NPT conduit fitting connection.
- **Operating Temperature Range:** -40°F to 185°F (-40°C to 85°C)
- **Snap switches:** 2-SPDT snap acting switches; 5A @ 480 VAC; 2A resistive, 1A inductive, up to 30 VDC
- **Range adjustment:** 0-7 G's; 0-100 Hz/0.10 in. displacement
- **Heater:** (Optional)

Option	Operating Current
-H15:	.023 A @ 115 VAC
-H24:	.12 A @ 24 VDC
- **Remote Reset:**

Option	Operating Current
-R15:	.17 A @ 115 VAC (momentary duty, not continuous)
-R24:	.36 A @ 24 VDC (momentary duty, not continuous)
- **Time Delay:**

Option	Operating Current	Standby Current
-T15:	.360 A @ 115 VAC	.01 A @ 115 VAC
-T24:	1.15 A @ 24 VDC	.01 A @ 24 VDC
- **Time Delay/Remote Reset:** Adjustable 20-turn potentiometer from 5 seconds to 100 seconds (5 seconds per turn approximately).
*CSA and UL listed with 480 VAC rating.

For UL Applications:

For UL applications, applicable temperature specification is de-rated to -40°F to 60°F (-40°C to 140°C).

Service Parts

PART NO.	DESCRIPTION
VS2	
20000030	Movement assembly
20000031	Glass and gasket assembly
20000032	Reset push button assembly
VS2C	
20000030	Movement assembly
20000031	Glass and gasket assembly
20000032	Reset push button assembly
20050021	Mounting clamp
20000261	Cable clamp assembly (1 each) (VS2C)
20000137	5 clamps and 45 feet (13.7 meters) of cable (VS2C)
VS2EX	
20010091	Movement assembly
20000288	Snap switch and insulator kit (one switch per kit) for models manufactured on Sept. 1, 1995 or later
20000289	C-clamp conversion mounting kit
VS2EXR	
20000262	Movement assembly
20050087	Cover
00000309	Cover gasket
20000288	Snap switch and insulator kit (one switch per kit) for models manufactured on Sept. 1, 1995 or later
20000289	C-clamp conversion mounting kit
VS2EXRB	
20000288	Snap switch and insulator kit (one switch per kit) for models manufactured on Sept. 1, 1995 or later
20000262	Movement assembly
VS94 Series	
25050506	Dust boot
20000288	Snap switch and insulator kit (one switch per kit) for models manufactured on Sept. 1, 1995 or later

THIS PAGE INTENTIONALLY LEFT BLANK

In order to consistently bring you the highest quality, full featured products, we reserve the right to change our specifications and designs at any time. MURPHY products and the Murphy logo are registered and/or common law trademarks of Murphy Industries, LLC. This document, including textual matter and illustrations, is copyright protected by Murphy Industries, LLC, with all rights reserved. (c) 2013 Murphy Industries, LLC. A copy of the warranty may be viewed or printed by going to <http://www.fwmurphy.com/warranty>

ENOVATION CONTROLS CORPORATE HEADQUARTERS
5311 S 122ND EAST AVENUE
TULSA, OK 74146

ENOVATION CONTROLS – SAN ANTONIO OFFICE
5757 FARINON DRIVE
SAN ANTONIO, TX 78249

ENOVATION CONTROLS – HOUSTON OFFICE
105 RANDON DYER RD
ROSENBERG, TX 77471

ENOVATION CONTROLS LTD. – UNITED KINGDOM
CHURCH ROAD LAVERSTOCK
SALISBURY SP1 1QZ UK

MURPHY ECONTROL TECHNOLOGIES (HANGZHOU) CO, LTD.
77 23RD STREET
HANGZHOU ECONOMIC & TECHNOLOGICAL DEVELOPMENT AREA
HANGZHOU, ZHEJIANG 310018 CHINA

DOMESTIC SALES & SUPPORT

ECONTROLS PRODUCTS
PHONE: 210 495 9772
FAX: 210 495 9791
EMAIL: INFO@ECONTROLS.COM
WWW.ECONTROLS.COM

MURPHY PRODUCTS
PHONE: 918 317 4100
FAX: 918 317 4266
EMAIL: SALES@FWMURPHY.COM
WWW.FWMURPHY.COM

MURPHY CONTROL SYSTEMS & SERVICES
PHONE: 281 633 4500
FAX: 281 633 4588
EMAIL: CSS-SOLUTIONS@FWMURPHY.COM

MURPHY INDUSTRIAL PANEL DIVISION
PHONE: 918 317 4100
FAX: 918 317 4124
EMAIL: IPSALES@FWMURPHY.COM

INTERNATIONAL SALES & SUPPORT

UNITED KINGDOM
PHONE: +44 1722 410055
FAX: +44 1722 410088
EMAIL: SALES@ENOVATIONCONTROLS.EU
WWW.FWMURPHY.EU

CHINA
PHONE: +86 21 6237 5885
FAX: +86 21 6237 5887
EMAIL: APSALES@FWMURPHY.COM

LATIN AMERICA & CARIBBEAN
PHONE: 918 317 2500
EMAIL: LASALES@FWMURPHY.COM

SOUTH KOREA
PHONE: +82 70 7951 4100
EMAIL: SKOREASALES@FWMURPHY.COM

INDIA
PHONE: +91 91581 37633
EMAIL: INDIASALES@FWMURPHY.COM

ISO 9001
REGISTERED



USA (TULSA) - ISO 9001:2008 FM 28221
USA (ROSENBERG) - ISO 9001:2008 FM 28221
UK - ISO 9001:2008 FM 29422
CHINA - ISO 9001:2008 FM 523851
Registered Facilities

Printed in the USA